4. General Error Function

•· When an error occurs, this function starts to keep generating error melody sounds and displays error indicators as shown in the followings per corresponding error by blinking in 0.5sec interval until the error status is completely cleared out. In this case, all the driving devices are turned off until the error is cleared out.

1. WATER SUPPLY ERROR
- Water Supply Error occurs when water level frequency does not show changes more than 100Hz or water is not supplied up to the water level presetting for 20 min or more at the time of initial water supply.
- The error status can be cleared by turning POWER S/W OFF and resuming the POWER ON initial status.

2. WATER DRAIN ERROR
- In case the water level frequency is 25.5KHz or less in the initial phase of UNB-detecting cycle.
- Water Drain error can be cleared by turning POWER S/W OFF and resuming the POWER ON initial status.

3. OVER-FLOW ERROR
- Over-Flow error occurs when the water level is in abnormal operation. It can be cleared by turning POWER S/W OFF. Water is drained prior to POWER S/W OFF and it is forced to be drained for 2 min if a frequency of more than 25.24 KHz is detected.

4. DOOR OPEN ERROR
- Door Open error can be cleared by closing the door.

5. UNBALANCE ERROR
- Laundry load is unbalanced; loosen any tangled laundry.
- If only one item of clothing needs washing, such as a bathrobe or jeans, the final spin result might be unsatisfactory and an “UNBALANCE” error message will be shown in the display window.
- Unbalance error is cleared by POWER S/W OFF and by resuming the POWER ON initial status.

6. WATER HEATER ERROR
- In case the water temperature rises by 40°C or more in 5 min. or by 2°C less in 10 min after heating is started.
- It can be cleared by turning POWER S/W OFF.

7. ASS’Y PRESSURE S/W ERROR

* Generated Frequency Signal of WATER LEVEL(W/L) S/W (KHz)

Level	Low Level	High Level
Abnormal W/L Frequency	30.00 KHz	15.00 KHz

- If the same signal as the above table is detected for more than 5 seconds, it is a PRESSURE S/W Error.
- When the error occurs, water drain pump will operate for 3 min. and then turn off the water drain pump.

8. ABNORMAL WATER TEMPERATURE ERROR

Course	Water Temp
Delicate	50˚C or more
Wool	50˚C or more

- In case the water temperature is 50°C or more in Delicate and Wool course.
- At the time of initial water supply, if the water temperature is not appropriate, water starts to be drained and it is forced to be drained for 2 min when the abnormal frequency of 25.24KHz is detected.
- This error can be cleared by POWER S/W OFF.

9. WATER LEAKAGE ERROR
- Water Leakage error occures when water is drained naturally after washing program starts.

4-1. Error Display

	Pre(L1)	Wash(L2)	Rinse(L3)	Spin(L4)	-	-
	Quick(L5)	Rinse+(L6)	Pre(L7)	Eco(L8)	Sock(L9)	Start(L10)
Door	ON/OFF	ON/OFF	ON/OFF	ON/OFF	-	-
Error	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF	**ON**
Water Supply	ON/OFF	ON/OFF	ON/OFF	ON/OFF	-	-
Error	ON/OFF	**ON**	ON/OFF	ON/OFF	ON/OFF	**ON**
Water Drain	ON/OFF	ON/OFF	ON/OFF	ON/OFF	-	-
Error	ON/OFF	ON/OFF	**ON**	ON/OFF	ON/OFF	**ON**
Unbalaance	ON/OFF	ON/OFF	ON/OFF	ON/OFF	-	-
Error	ON/OFF	**ON**	**ON**	ON/OFF	ON/OFF	**ON**
Overflow	**ON**	**ON**	ON/OFF	ON/OFF	-	-
Error	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF
Heater	ON/OFF	**ON**	**ON**	ON/OFF	-	-
Error	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF
Pressure S/W SENSER	**ON**	**ON**	**ON**	ON/OFF	-	-
Error	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF
Water Leakage	**ON**	ON/OFF	ON/OFF	**ON**	-	-
Error	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF

5. Trouble Diagnosis

● As the micom wash machine is configured of the complicate structure, there might be the service call. Below information is prepared for exact trouble diagnosis and suitable repair guide.

Caution for the Repair and Replacement

Please follow below instruction for the trouble diagnosis and parts replacement.

1) As some electronic components are damaged by the charged static electricity from the resin part of wash machine or the human body, prepare the human body earth or remove the potential difference of the human body and wash machine by contacting the power supply plug when the work contacting to PCB is executed.

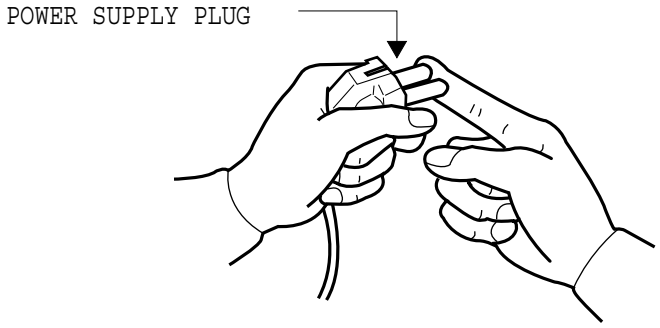

2) Since AC220~240V is applied to the triac T1 and T2 on P.C.B, the electric shock may occur by touching and be careful that the strong and weak electricity are mixed.

3) As the P.C.B assembly is designed for no trouble, do not replace the P.C.B assembly by the wrong diagnosis and follow the procedure of the trouble diagnosis when the micom is not operated normally.

6. Trouble Diagnosis

No	Item	Cause and treatment
1	The power is not supplied	- Is the PCB connector connected well? - Is the voltage normal? - Is the power supply plug connected well? - Is the noise filter connected well? - Is the secondary output of the power supply transformation normal? - Is the fuse disconnected? (option) • If above points are not found, the PCB assembly is out of order. Replace it.
2	The water is not supplied.	- Is the knob open? - Did you push START/PAUSE button after selecting the course? - Is the water supply valve connected well? - Is the winding of the water supply valve continuous? - Is the connection and operation of the pressure switch normal? • If above points are not found, the PCB assembly is out of order. Replace it.
3	The wash does not start though the water supply is stopped.	- Is the connection and operation of the pressure switch normal? - Is the pressure switch hose damaged so that the air is leaked? - Is the pressure switch hose bent? - Check the operation of the water level switch. • If above points are not found, the PCB assembly is out of order. Replace it.
4	The drum does not rotate during washing.	- Is the belt connected well? - Is the winding of the motor continuous? (Rotor winding, stator winding, generator) - Is the motor protector normal? • If above points are not found, the PCB assembly is out of order. Replace it.
5	The drum rotates by one direction during washing. (The drum rotates to one direction for SPIN.)	- The PCB assembly is out of order. Replace it. (Inversion relay open trouble)
6	Drainage problem.	- Is the drainage hose bent? - Is the winding of the drainage pump continuous? - Is the drain filter clogged by the waste? • If above points are not found, the PCB assembly is out of order. Replace it.
7	Dehydration problem.	- The unbalance is detected. - Put in the laundry uniformly and start again.
8	Abnormal noise during SPIN.	- Is the pulley nut loosen? - Is the transport safety device removed? - Is the product installed on the level and stable place? (Little noise may be generated during the high-speed SPIN.)
9	Leak breaker or current/leak breaker is down during washing.	<When the leak breaker and current breaker is installed separately> - When the leak breaker is down, check and make the earth of the outlet. - When the current is down, the current is leaked. <Is the breaker down when the leak/current breaker is combined?> - Check the rated capacity of the current and leak breaker. The current breaker may be down due to the lack of the current when the wash machine and other apparatus are used. In this case, execute the cold water wash to check whether the current capacity is lack.
10	The heating is not executed.	- Is the wash heater terminal unplugged? - Is the wash heater normal? - If above points are not found, the PCB assembly is out of order. Replace it.